

A Quickstart Guide

 
Apartment

Appliances

NATIVE

Your apartment's got all the appliances you need to live well while you stay with us. Here's how to use them.


Microwave, grill & oven

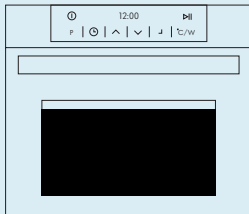

This is a microwave, oven and grill combined.
Pick your function and follow the steps below.


1. Press the ON/OFF symbol. ⏻
2. Choose desired programme.
The number next to the flashing P indicates the programme number. Use the up and down arrows to change the programme. ⬆️⬆️
 - P1 = Microwave only
 - P2 = Oven low setting
 - P3 = Microwave with fan
 - P4 = Main oven heating
 - P5 = Full grill, microwave assist
 - P6 = Full Grill
 - P7 = Grill, oven and microwave
 - P8 = Low grill
 - P9 = Defrost mode
 - P10 = Warm keeping
3. For each programme, adjust the temperature by pressing °C/W symbol, use the up and down arrows to adjust the temperature and repress °C/W when at the desired temperature.
4. To set the timing for all programmes press the clock ⌚ symbol. Use the up and down arrow to adjust the timing and repress the clock symbol when the desired time has been reached.
5. Press ▶️ Symbol to start and stop all programmes.
6. After cooking is completed END and II symbol will appear on the display and an alarm signal will sound.
7. To stop the alarm sound, press any key on the display.
8. If the door has been opened and closed during cooking, you'll need to press the ▶️ Symbol again.

 Hob

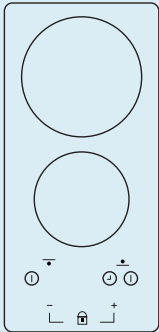

1. To turn the hob on, press and hold the power button. ①
2. Use the left power button for the lower hob and the right power button for the above hob.
3. Press the + and – buttons to adjust the temperature.
4. Press and hold the power button to turn the hob off.
An H symbol should appear once off, indicating the element will still be hot.
5. To lock and unlock the hobs press and hold the + and – buttons at the same time.
6. Please ensure the extractor fan above the hob is turned on during cooking.

 
Washing machine & dryer

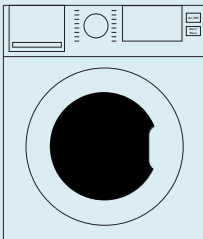

1. To switch on press the on/off button and lights will appear on the dial.
2. Add detergent:
 - II - white compartment for powder detergent
 - II - small blue compartment for liquid detergent
 - - liquid softener
3. Select suitable wash cycle with programme selection dial.
4. Press start/pause button.


You can dry your laundry after the washing cycle without any interruption by selecting the drying function before starting the washing programme.

 Dishwasher



1. Press on/off button. Lights on the panel will only illuminate when the machine is switched on.
2. To select a programme press P button and hold until the desired programme is selected. To cancel a programme press and hold for 3 secs. Programme options can be found next to the start button.

 Connecting to Wi-Fi

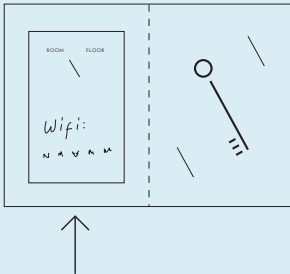

Our Wi-Fi is fast and free. You'll find your unique apartment password on the key card holder you were given when you arrived. You can also find the log-in details on your TV's standby screen.

Open the Wi-Fi settings on your device and search until your apartment number appears.

Select your apartment number (5G option also available) and enter the password written in your key card holder.

Fresh air

As well as the ceiling fan in your room there are also fresh air vents. To control the air vents and the grill, use the switch on your bedroom wall that doesn't control the lights.

Still need a hand?

Just ask at reception or use one of the numbers below.

Telephone: +44 161 503 9553

WhatsApp: +44 7557985951